

- 0x274E(10062) Misfire Detection Sum Malfunction>Maturing or Intermittent:Above Max. Threshold... Read Codes
- 0x2746(10054) Misfire Detection Cylinder 6>Maturing or Intermittent:Above Max. Threshold:Warni... Read Codes
- 0x2849(10313) Line Break At Pump Current>Maturing or Intermittent:No Signal:Warning Lamp On Read Codes
- 0x2745(10053) Misfire Detection Cylinder 8>Maturing or Intermittent:Above Max. Threshold:Warni... Read Codes
- 0x2743(10051) Misfire Detection Cylinder 5>Maturing or Intermittent:Above Max. Threshold:Warni... Read Codes
- 0x2749(10057) Misfire Detection Cylinder 2>Maturing or Intermittent:Above Max. Threshold:Warni... Read Codes
- 0x2747(10055) Misfire Detection Cylinder 3>Maturing or Intermittent:Above Max. Threshold:Warni... Read Codes
- 0x2748(10056) Misfire Detection Cylinder 7>Maturing or Intermittent:Above Max. Threshold:Warni... Read Codes